

NOZZLE TESTER KE-1995

KE-1995

Features

- For all kinds of diesel vehicle and agriculture machine's nozzle testing.
- No shaking needle at measuring.
- Providing various using adaptor.
- Measure exact pressure
- Due to perfect process, possible to use semi-permanently.
- Easy to handle and use.



Specification

Model	KE-1995
Dimensions	200 X 140 X 420 mm
Weight	5.5 kg
Fuel capacity	Approx. 0.6 Liters
Input measuring instrument	Max. 500 Kg / cm ² , Min. 10 Kg / cm ²
Accessory	As standard

How to use

1. Install the nozzle
2. Check the fuel in fuel tank
3. Operating lever and take out air (Loose screw and operating lever and take out air and then loose the nut of nozzle.)
4. Operate operating lever : Push 2 or 3 times and push it strongly.
5. Read the value(scale) in gauge. (Read the scale in lower points after the scale is higher and trembling it momentarily and stopping it.)

Notice

1. Don't pressure it strongly.
2. Don't touch hands the end of nozzle during testing of injecting pressure.